

## Installation and Operating Instructions

Special accessories dimmer/timer for  
Lumistar luminaires ASL55LED-Ex (aluminium)  
and ESL55LED-Ex (stainless steel)

II 2G Ex db IIC T6 Gb  
II 2D Ex tb IIIC T80°C Db

### 1. Push-button function:

- The luminaire is switched on and off by pressing the button once.

### 2. Dimmer function:

- Switch on the luminaire by pressing the button.
- Press the button and hold it depressed.  
The brightness will change.
- Release the push-button when the required light intensity has been reached. This setting will be automatically saved. Please note: the luminaire will flash once the maximum and minimum brightness levels have been reached.

### 3. Timer function:

- In its delivery state, the luminaire is equipped with a work-fitted activated timer
- Push the button.  
The timer is automatically activated. The luminaire switches off by itself once the preset period of time has expired. If the dimmer function is used during the programmed period, the time set on the timer will restart once the push-button is released.
  - The run time can be interrupted by pressing the button again.

#### Activating/deactivating the timer function

- The timer is activated or deactivated by pressing the button and at the same time applying or switching on the mains voltage.

The current state of the luminaire is shown by

Flashing once = timer off

Flashing twice = timer on



Lumistar luminaire ASL55LED-Ex